



21401 Hemlock Ave. Lakeville, MN 55044
Phone: 952-469-4130 www.vi-king.com Fax: 952-469-4132

Congratulations on your purchase of Viking Crusader™ double adjustable shock absorbers! You can rest assured that you are getting the best value for your dollar with Viking high performance competition shocks.

**INSTALLATION / TUNING GUIDE FOR
VIKING CRUSADER DOUBLE ADJUSTABLE
STOCK MOUNT SHOCKS
[Part Numbers B301XX –B3xxxx]**

*Note: It is strongly recommended that you purchase a spanner wrench and thrust bearing kit (part #7995-102) for ease of adjustment.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

WARNING! (This warning does NOT apply to “CD” valving)

CRUSADER SERIES SHOCKS ARE DESIGNED FOR COMPETITION ONLY AND NOT INTENDED FOR STREET USE. WHEN VEHICLE IS OFF-TRACK OR BEING TRAIERED, CRUSADER SHOCKS MUST BE AT VIKING’S SPECIFIED OFF-TRACK SETTINGS ON BOTH COMPRESSION AND REBOUND. FAILURE TO USE THE SPECIFIED SETTINGS MAY DAMAGE THE SHOCK AND WILL VOID YOUR WARRANTY, AND MAY RESULT IN INJURY OR DEATH.

NOTE! Like many performance parts, aftermarket performance shocks may make more noise than factory shocks, especially in IRS equipped vehicles. Shocks that have been installed are not eligible for return.

INSTALLATION

Please read these instructions carefully prior to installing your new Viking shocks.

1. Verify that your shocks are the correct lengths and mount style before beginning installation. Contact your chassis builder, supplier or Viking if you have any questions. **Products that are used, installed or modified in any way are not eligible for return.** See our full Terms & Conditions of Sale at www.vi-king.com.
2. Measure your vehicle’s ride height by measuring from the center point of the fender lip down to the ground. Mark the spot you measured to for later reference.
3. Reference your vehicle’s owner’s manual to determine the proper jacking locations, and the instructions for removing the shocks and springs. **FAILURE TO FOLLOW THE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH.**
4. Jack your vehicle up until the tires do not touch the ground and the suspension hangs freely. Removing the wheels is not required in all cases, but it does allow for easier access. Remove the shocks and sway bar mounts, if applicable, and retain all mounting hardware.
5. **Important:** Ensure that factory or replacement compression bumpers are in place and in good condition prior to installing the shocks. **IF THE FACTORY BUMPERS OR EQUIVALENT ARE DAMAGED OR ARE NOT PRESENT, DAMAGE TO THE SHOCK MAY OCCUR THAT IS NOT COVERED UNDER WARRANTY.**
6. It is important to note that your shocks are never to be used as a travel limiter. Severe damage will result that will not be covered under the warranty. Straps or cables made for travel limitation should be used prevent

topping out. Vehicles used in a manner where they could bottom out the shocks (such as drag racing) should use a higher rate spring and a bump stop to help prevent shock damage. Any shock can be damaged from wheel stands despite bump stops.

Front Shocks:

1. If applicable, install one stud washer and one bushing (half of the shock stud bushing pack) onto the stud on the upper mount.
2. Confirm that the shocks will fit through the lower control arms without modifications. If no, continue to step (3). If yes, put the shock through the lower control arm and slide the upper shock mount into place, tighten all nuts and bolts to factory specifications, and proceed to step (8).
3. Use a floor jack to support the lower control arm, remove the cotter pin from the lower ball joint and loosen the ball joint nut. Remove the ball joint stud from the spindle using a tie rod / ball joint separator. **Carefully and slowly** release the lower control arm assembly by lowering the floor jack until the spring can be safely removed.
4. **Important: Verify the shock body will clear the spring pocket sheet metal. These tolerances varied greatly out of the factory, and this pocket may need to be opened up to allow adequate clearance for the shock body.**
5. Fully extend the shock and put the T-bar through the lower control arm and insert the bolts but **do not tighten** them completely at this time. The knobs on the shock should be facing out toward the spindle.
6. Slide the coil spring over the shock and align it in the lower control arm. Align the upper shock mount and the factory spring in the spring bucket. Jack the lower control arm up very slowly, making sure that the shock is not binding as the spring is compressed.
7. Install the upper stud bushing, washer and nut and tighten the two control arm shock bolts to factory specifications.
8. Reassemble the lower a-arm and the spindle. Torque the spindle nut to factory specifications and insert the cotter pin.
9. Reattach the wheels and verify everything has been torqued to the specifications defined by the vehicle's manufacturer.
10. Carefully place the car on the ground to check clearances again. Lightly bounce the vehicle at each corner to verify that there are not any clearance issues.
11. Measure the ride height as you did prior to installation and ensure that there is sufficient travel in both directions. Ideally, 60% of the shock stroke will be available for compression. **INCORRECT RIDE HEIGHT COULD RESULT IN DAMAGE TO THE SHOCK THAT IS NOT COVERED UNDER WARRANTY.**

Rear Shocks:

1. If applicable, install one stud washer and one bushing (half of the shock stud bushing pack) onto the stud on the upper mount.
2. Mount the upper portion of the shock then mount the lower portion of the shock to the rear end housing. There should be little or no modifications necessary.
3. Make certain that everything is mounted securely then, if necessary jack the rear end housing into the chassis. If applicable, make sure that the springs are realigned.
4. Verify everything has been torqued to the specifications defined by the vehicle's manufacturer.
5. Carefully place the car on the ground to check clearances again. Lightly bounce the vehicle at each corner to verify that there are not any clearance issues.
6. Measure the ride height as you did prior to installation and ensure that there is sufficient travel in both directions. Ideally, 60% of the shock stroke will be available for compression. **INCORRECT RIDE HEIGHT COULD RESULT IN DAMAGE TO THE SHOCK THAT IS NOT COVERED UNDER WARRANTY.**

VIKING CRUSADER™ TUNING AND ADJUSTMENT INSTRUCTIONS

Vehicles used on for drag racing, road racing and auto cross will all have different needs in terms of shock valving. However, it does not stop there. Driver style / capability, road / track conditions, vehicle type (car vs. pickup, etc.), vehicle weight, horsepower, tires, etc. all create different needs in terms of shock valving. That is the beauty of a double adjustable shock. Your Viking Crusader™ shocks have a total of 19 positions (18 clicks plus a zero position) of compression adjustment and a total of 22 positions (21 clicks plus a zero position) of rebound adjustment, for a total of 418 different valvings. The “C” knob adjusts compression, while the “R” knob adjusts rebound. Every Viking shock is tested on a dynamometer prior to shipment to ensure that it is functioning properly. Manually moving a shock is not an accurate testing method for ensuring that shocks are functioning properly. Position zero is the softest setting and is found by turning the knob counterclockwise until the positive stop is located. Only very light force is needed to adjust the knobs; do not ever force the knob past its intended stop as doing so will damage the shock.

Recommended baseline points for adjusting your shocks are outlined below based on the various shock Crusader™ valving options. Also, please consider the following:

Off Track (e.g. Trailering):

The rebound and compression settings must be at Viking’s specified off-track settings or lower when the vehicle is off-track, such as when it is being trailered or driven in the pit.

Handling (Auto-Cross/Road Race):

The handling and autocross settings will vary depending on spring rate. For example, if very firm springs are utilized, the compression setting might be set softer and the rebound setting firmer. In addition, the track condition will also have an impact on the settings. For a rough track, it may be necessary to soften the rebound, as the vehicle may have a tendency to skip across the track if you encounter a rough surface in a corner.

Drag Race:

For drag racing, a lot will depend on how the driver wants the car to react. Does the racer want to maximize weight transfer? If so, the front will be set with a stiffer compression and soft rebound, while the rear will have a soft compression and stiffer rebound. If the racer desires to limit weight transfer, the setting will go in the opposite direction. Track conditions will also impact the settings. For example, a hot slick track will often require stiffer compression and rebound. In addition, as a general rule of thumb, if the tires spin at the hit, soften the rebound. If the tires spin after the initial hook, stiffen the rebound (the compression can also be stiffened in this instance).

Cruising (“CR” kit) - Crusader™ “CD” Front & “CD” Rear Valving

Off Track:	Front (“CD”):	6 - 10 compression; 8 - 12 rebound
	Rear (“CD”):	4 – 8 compression; 5 - 9 rebound

Drag-Lower Horsepower (“DL” kit) – Crusader™ “AD” Front & “AJ” Rear Valving

Off Track:	Front (“AD”):	1 - 4 compression; 5 - 9 rebound
	Rear (“AJ”):	0 - 3 compression; 3 - 7 rebound
Handling:	Front (“AD”):	8 - 12 compression; 14 - 18 rebound
	Rear (“AJ”):	7 - 11 compression; 11 - 15 rebound
Drag Racing:	Front (“AD”):	12 - 16 compression; 0 - 4 rebound
(weight transfer)	Rear (“AJ”):	0 - 4 compression; 6 - 10 rebound

Drag-Higher Horsepower (“DH” kit) – Crusader™ “AK” Front & “AM” Rear Valving

Off Track:	Front (“AK”):	1 - 4 compression; 3 - 5 rebound
	Rear (“AM”):	0 - 3 compression; 0 rebound
Handling:	Front (“AK”):	8 - 12 compression; 10 - 14 rebound
	Rear (“AM”):	7 - 11 compression; 12 - 16 rebound
Drag Racing: (front tie-down)	Front (“AK”):	8 - 12 compression; 15 - 19 rebound
	Rear (“AM”):	7 - 11 compression; 8 - 14 rebound
Drag Racing: (weight transfer)	Front (“AK”):	12 - 16 compression; 0 - 4 rebound
	Rear (“AM”):	0 - 4 compression; 6 - 12 rebound

Pro-Touring (“PT” kit) - Crusader™ “AP” Valving

Off Track:	Front (“AP”):	1 - 4 compression; 0 rebound
	Rear (“AP”):	0 - 3 compression; 0 rebound
Handling:	Front (“AP”):	8 - 12 compression; 10 - 14 rebound
	Rear (“AP”):	7 - 11 compression; 8 - 12 rebound
Drag Racing: (front tie-down)	Front (“AP”):	8 - 12 compression; 15 - 19 rebound
	Rear (“AP”):	7 - 11 compression; 6 - 10 rebound
Drag Racing: (weight transfer)	Front (“AP”):	12 - 16 compression; 0 - 4 rebound
	Rear (“AP”):	0 - 4 compression; 4 - 8 rebound

NOTE: The above recommended starting points are suggestions. These settings may or may not work for your application. Certain vehicle/driver/track combinations may have optimal shock settings completely outside of these ranges. That is the beauty of a double adjustable shock absorber... you can set it where it works the best for you and your set-up!

WARRANTY

Viking warrants that the products will be free from defects in material and workmanship for two years from date of sale to the original purchaser. Viking makes no other warranty of any kind, express or implied. Viking shall have no obligation under the foregoing warranty where the defect is the result of improper or abnormal use, your negligence, vehicle accident, improper or incorrect installation or maintenance, nor when the product has been repaired or altered in any way. Viking’s liability in the case of defective products subject to the foregoing warranty shall be limited to the repair or replacement only, at Viking’s option, of the defective products. In no event shall Viking be liable for the cost of procurement of substitute products, or liable for any indirect, special, incidental, consequential or exemplary damages for any reason. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

In order to be eligible for service under this warranty, return the defective part to Viking together with the pre-approved R.G.A. number issued by Viking. Tag each item with the part number and the specific explanation of defect. All returns must be shipped prepaid to: Viking Performance, Inc., RGA # _____, 21401 Hemlock Ave., Lakeville, MN 55044.

Purchaser acknowledges that parts and services sold by Viking are exposed to a wide variety of conditions, and that Viking does not have full knowledge of the intended use of the goods. Purchaser agrees to indemnify and hold Viking harmless upon demand against all claims, actions, loss, damage or injury resulting from the direct or indirect use of the products, or purchaser’s inability to determine the proper use or application of the products. Viking shall not be liable for any claims, demands, injuries, damages, actions, or causes of action whatsoever to buyer arising out of or connected with the use of any Viking products. MOTORSPORTS ARE DANGEROUS; AS SUCH, NO WARRANTY OR REPRESENTATION IS MADE AS TO THE PRODUCTS’ ABILITY TO PROTECT THE USER FROM INJURY OR DEATH. THE USER FULLY ASSUMES THAT RISK. ALL PRODUCTS ARE INTENDED FOR RACING AND OFF-ROAD USE AND MAY NOT BE LEGALLY USED ON THE HIGHWAY. We reserve the right to change specifications without notice.